 


## INSTRUCTIONS MANUAL FOR ANALOG-DIGITAL WATCH

#1 - MOVT. T250

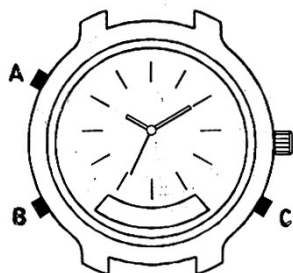

### FUNCTIONS

Analogue - 3 hands  
Digital - Hour  
Second  
Calendar  
Alarm  
Chime  
Stopwatch

- 2 -

### ADDITIONAL FEATURES

Digital - Alarm Monitor.  
Automatic end of the month correction.  
Switching between 12 and 24 hour display.  
Electro-luminescent display.

### HOW TO SELECT FUNCTIONS

Depress A to Enter:  
1. Alarm Mode  
2. Chronograph Mode  
3. Calendar Mode  
4. Normal Time

- 3 -

### HOW TO OPERATE THE STOPWATCH

Press A twice - Enters Stopwatch Mode.  
Press C - Starts or Stops the Stopwatch.  
Depress B - If the Stopwatch is stopped, B will go to the reset function. If the Stopwatch is running, B will go to start/stop for the lap function.  
Press A twice - Back to the normal time function.

- 4 -

### HOW TO ADJUST TIME

Depress B - For 3 second, enters the normal time setting mode; the sequence is second/minutes/hour & 12/24 option.  
Depress C - Advances the setting at each setting mode.  
Depress A - Back to normal time function.

- 5 -

### HOW TO ADJUST CALENDAR

Depress A - 3 times, enter the calendar mode.  
Depress B - For 3 seconds, enters the calendar setting mode; the sequence is date/month & day of week.  
Depress C - Advances the setting at each setting mode.  
Depress A - back to normal time function.

- 6 -

### HOW TO SET ALARM

Depress A - Enters the alarm mode.  
Depress C - Alarm on/off selection.  
Depress B - Enters alarm time setting mode; the sequence is hour, 2nd place of minute, 1st place of minute.  
Depress C - Advances the setting at each setting mode.  
Depress A - 3 times, return to normal time function.

- 7 -

### HOW TO SET CHIME FUNCTION

Depress A - 3 times, enters the calendar mode.  
Depress C - And hold.  
Depress B - On/off the chime function.  
\*Chimes on the hour.

### HOW TO LIGHT UP THE DISPLAY

Depress C - The electro-luminescent display will be turn on.

- 8 -