


LIGHT (A Key) ————— (D Key) START
MODE (B Key) ————— (C Key) RESET



A. Features

- 12 Digits LCD Display, Display Hour, Minute, Second, Month, Day and Week
- Daily Alarm and Chime hourly
- Snooze
- 12 / 24H format selectable
- 1/100 second Chronograph with split functions
- EL backlight

B. Operational Manual

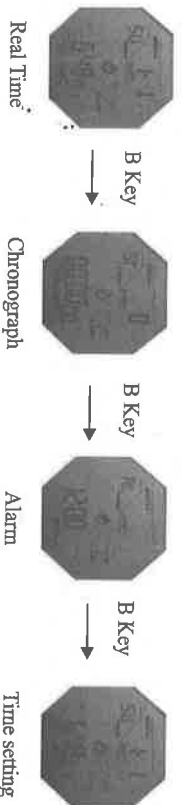



1. At any state,press A key EL backlight for 3s.

2. Chronograph

- Press D key to Start/Stop running;
- When stop ,press C key to zero .
- When running ,press C key to split count, indicator "SP" showing
- Then press D key to exit split count and stop counting; press C key again to zero ;
- When running ,press B key to return to Real Time Mode ,and it running at back .

3. Daily Alarm

- Turn On / Off Alarm and Chime
Press D key to turn on/off Alarm () or Chime ()
- Alarm setting : Press C key to select "Hour " or "Minute "setting, Press D key to adjust the flashing item, Press C key to confirm, Press B key to return to Real Time mode.
- Alarm Snooze ON/OFF
At Alarm sounding state ,press C key or D key to stop sounding, and press B key to ON/OFF snooze function .When Snooze function be ON ,it will sound five minutes later ,and auto stop after sounding for 20 Second

4. Time Setting

- "Second " flashing when loading ,press D key to zero ; Press C key to select item as following sequence :
Hour → Minute → Month → Day → Day of Week → Second
- When setting "Hour " , "H" display for 2 4 H format ; "A " or "P " for 1 2 H format .
- Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes .
In the range of 00 to 29,the minutes are unchanged